

Cotton Candy Instructions

Plug in machine. With motor not running, fill floss head about 90% full with sugar. Distribute sugar evenly in head.

Do not Overfill

Flip on main switch and heat switch to on position. Turn heat knob clockwise to maximum setting.

The machine will begin to make floss in a few seconds. Turn the heat knob counter clockwise if floss begins smoking. Adjust the heat to the best selection.

Use a damp cloth to moisten the inside of floss pan. Practice picking up the floss with the cone. Use a twisting motion to get the floss to stick to cone.

Always stop the motor to add more sugar.

Return floss pan and cart clean. Do not take machine apart to clean.