

Popcorn Machine

To make popcorn, turn switches for the kettle and warming light on. Empty contents of popcorn and seasonings into the kettle. As the kettle gets hot, popcorn will begin to pop. When the popping has finished, dump the kettle out, and either add another package of corn to make more, or turn the kettle switch off so the kettle does not burn. Keep the warming light on to keep the popcorn warm.

Cleaning Instructions

Before returning, please clean the machine with mild soap and water. Wipe out kettle and empty the tray under the machine. Please be sure to return the scoop.

Cleaning Charge

A cleaning charge of \$25.00 will be added if machine is returned dirty.